



QUADRANT 3200

		3200 RF	3200 RC / FC
Hitching			
PTO shaft speed	rpm	1000	1000
Hydraulic jack		●	●
Ball hitch		○	○
Pick-up			
Width	m	2.10	2.10
DIN raking width	m	1.90	1.90
Number of tine bars		4	4
Ground tracking via two oscillating pick-up castor guide wheels		●	●
Hydraulic connection			
Two single-acting spool valves and one open return line*		●	●
Crop feed			
Rotor		ROTO FEED	ROTO CUT / FINE CUT
Number of knives		0	25 (0, 6, 13, 25) / 49
Two-phase packer tines		●	●
Switchable pre-chamber (adjustable, 3 options)		Deactivated, small swath, large swath	Deactivated, small swath, large swath
Baling channel			
Ram strokes	rpm	51	51
Max. baling pressure	bar	200	200
Bale ejector		●	●
Bale deposit sensor		○	○
Moisture sensor		○	○
Baling channel dimensions			
Length	m	3.00	3.00
Width	m	1.20	1.20
Height	m	0.70	0.70
Bale length	m	0.50 – 3.00	0.50 – 3.00
Control terminal			
CLAAS COMMUNICATOR		●	●
Tying			
Number of knotters		6	6
Number of twine reels in the twine box		24 x 11.5 kg	24 x 11.5 kg
TURBO FAN knotter cleaning		●	●
Bale drop onto field			
Hydraulic bale chute with ejector		□	–
Hydraulic roll chute with ejector		●	●
Axle			
Single axle		●	●
Tandem axle		○	○
Steered tandem axle		○	○
Tyres			
Single axle		600/50 R 22.5	600/50 R 22.5
		700/45 R 22.5	700/45 R 22.5
Tandem axle		520/50 R 17	520/50 R 17
Steered tandem axle		500/55 R 20	500/55 R 20
		620/50 R 22.5	620/50 R 22.5
Dimensions and weights			
Width	m	2.52 – 3.00	2.52 – 3.00
Height	m	2.55 – 2.65	2.55 – 2.65
Weight	kg	7720 – 8080	8800 – 9200

● Standard ○ Optional ■ Available – Unavailable □ Variable * Version-specific

CLAAS continually develops its products to meet customer requirements. This means that all products are subject to change without notice. All descriptions and specifications in this brochure should be considered approximate and may include optional equipment that is not part of the standard specifications. This brochure is designed for worldwide use. Please refer to your nearest CLAAS dealer and their price list for local specification details. Some protective panels may have been removed for photographic purposes in order to present the function clearly. To avoid any risk of danger, never remove these protective panels yourself. In this respect, please refer to the relevant instructions in the operator's manual.